


TECH TIPS FOR THIRD BRAKE LIGHT ANTENNA WITH BACK-UP CAMERA

Use the two center screws to secure the antenna adapter to the lens hand tight.



Remove the screws and separate the adapter from the lens. You will see a slight indentation at the top. Use these markings as a guide to carefully file the lens housing for clearance.

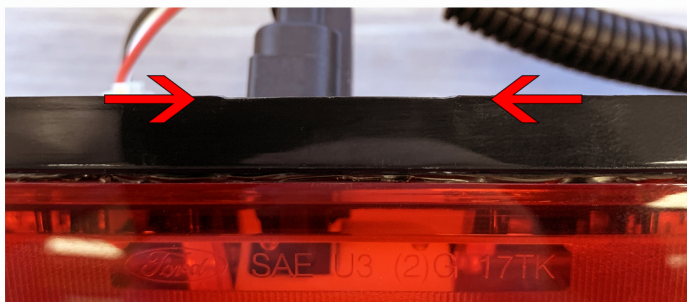

You will need to trim approximately 1/8th" deep by 1.5" long as shown.

