

# THIRD BRAKE LIGHT ANTENNA MOUNT

---

## DUAL RAM ANTENNA MOUNT

- 2009-2018 RAM 1500
- 2010-2023 RAM 2500/3500/4500
- 2019-2020 RAM 1500 CLASSIC BODY



## INSTALLATION MANUAL

# 90201243 - RAM DUAL ANTENNA MOUNT INTRODUCTION

Thank you for your purchase of our vehicle-specific Third Brake Light Antenna Mount! We hope that you find the installation simple and straight forward. As our customer, your satisfaction is important to us, if you should encounter any issue please call us for the quickest resolution at:  
480-247-2331 or 888-967-6653

**Pre-Caution** - Upon Completing the installation of the Third Brake Light Antenna Mount, the overall height of the vehicle will be changed. Be aware of your surroundings and heed all height restriction warnings as they pertain to your vehicle to avoid damage to the antenna, adapter or vehicle.

**Warranty:** One Year Parts Only Warranty - Warranty Limitations:

- Parts Only - Exchange Only Warranty
- Limited to defects in workmanship and materials.
- Shipping fees are **NOT INCLUDED** in any warranty claim.

\* In the event that you might have a warranty claim, please call to consult with our team **PRIOR** to taking action. We need be able to address the claim and track your return to ensure you the best service possible.

480-247-2331 or 888-967-6653

**Tools Needed:**

- Phillips Screw Driver
- Hex Head Driver

List of included installation hardware for 90201243

| Item    | Description                              | Quantity |
|---------|--|----------|
| 6502005 | 2010 – 2018 RAM Dual Antenna Mount Clamp | 2        |
| 6200166 | 10-24 x 1" Socket Head Cap Screw, 18-8SS | 4        |
| 6200219 | 10-24 x 1" Phillips Pan Head 18-8 Screw  | 2        |

**NOTE:** If your OE gasket looks like this - you may want to replace your lens. Replacement gaskets are **NOT** available and gaskets like this might leak.




1 - Using the Phillips head screwdriver, remove the two OE screws and set aside. You will want to save these in case you ever want to remove the antenna mount.




2 - Carefully pull the light away from the cab. Disconnect the wiring harness and set aside.

3 - Remove BOTH metal screw tabs from the cab. Save these tabs with the OE screws.

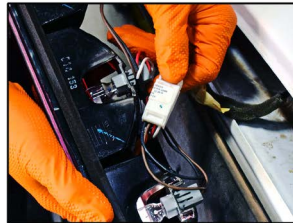

4- Route the cables through the cab following the brake light harness as shown.


Seat the antenna mount pins on each side into the existing cab holes.

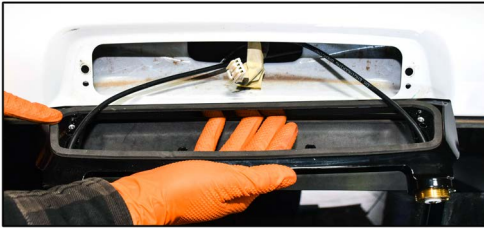

5 - Install the left side support bracket as shown sliding behind the cab - use two (2) of the supplied hex screws and one (1) bracket as shown. LEAVE HAND TIGHT. Repeat this process on the right side.



**NOTE**

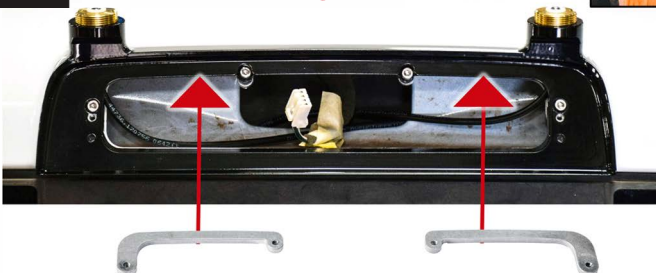

**THESE TWO BRACKETS SLIDE BEHIND THE CAB FRAME - YOU WILL NEED TO SECURE THEM WITH THE SUPPLIED HEX SCREWS.**

**\*\*Tighten BOTH sides down once you are sure the antenna mount is seated properly.\*\***

6 - Reinstall your OE Brake Light to the BulletProof Antenna Mount using the two (2) supplied Phillips screws. Be sure to reattach the brake light connector.



**BULLETPROOFDIESEL**  
.COM



E-MAIL: [SALES@BULLETPROOFDIESEL.COM](mailto:SALES@BULLETPROOFDIESEL.COM) | 4245 E PALM STREET MESA, AZ 85215



[@BULLETPROOFDESL](https://www.instagram.com/bulletproofdesl) 480.247.2331 • 888.967.6653