Drill four 3/16” holes as indicated by red arrows.

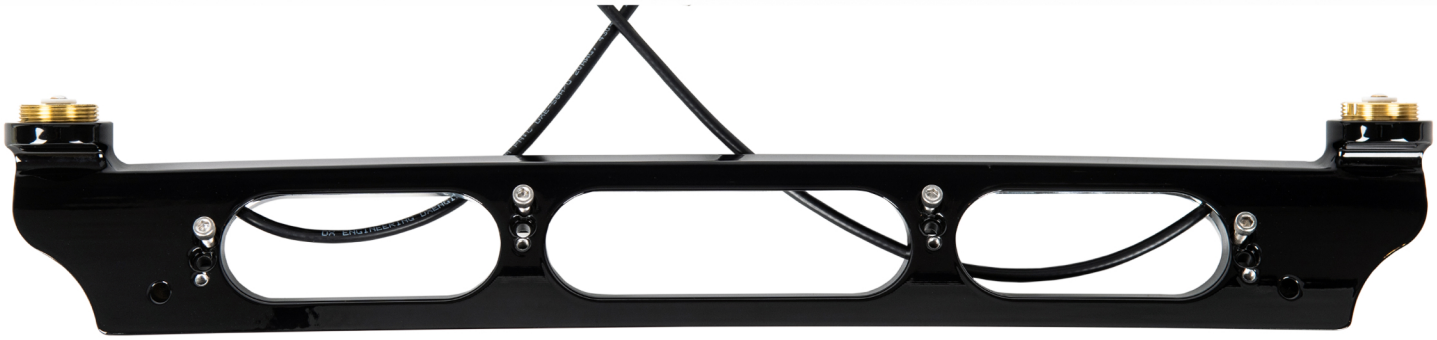

Use four supplied screws to attach the two provided plates as shown.

Be sure to leave room to secure the support plates to the cab of the truck.